


Coach Spares Not Illustrated	pack	R1013, R2197/A, R2379, R665A
Front Bogie	1	X3446
Rear Bogie	1	X3447
Artic Coach	1	X3450
Coach Bogie Corridor End	1	X6031
Bogie Camplate A/B Corr End	1	X8289
Bogie Clip Eurostar	2	L7782BL/1

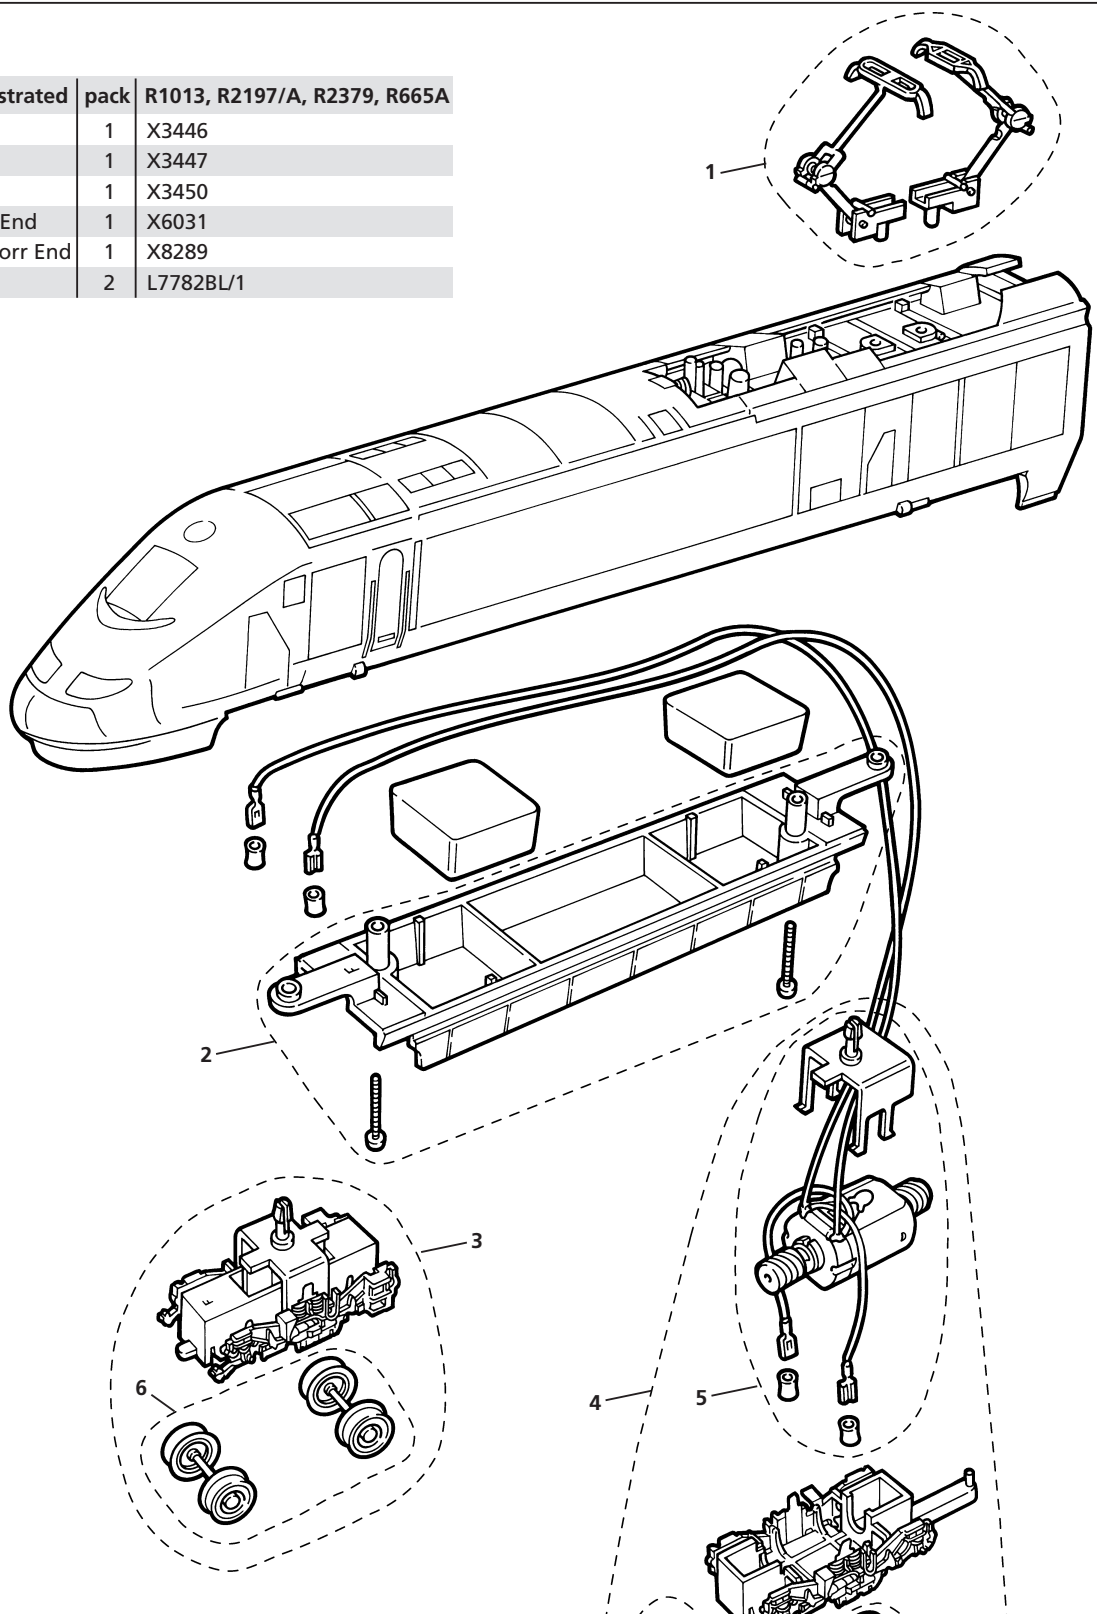

LIST OF SPARES

Item	Description	Pack	R1013, R2197/A, R2379, R665A
1	Pantograph A and B	1 + 1	X6027
2	Underframe with Screws	1	X6032
3	Front Bogie Complete	1	X3441
4	Power Bogie Complete	1	X3437
5	Motor and Retainer with Wires	1 + 1	X6028
6	Power Car Wheel Set	2 + 2	X6029
7	Traction Tyres	4	X6030